4/R6/R7/R9 RESPONDER SERIES WARNING LIGHTHEAD

Wiring

To +VDC (Suggested Fuse Rating: R4@2A / R6@4A / R7@3A / R9@5A)	
To -Chassis Ground	BLACK
Low Power	WHITE

For Synchronization, Flash Pattern & Setting:YELLOW Connect YELLOW wires of all lightheads together for synchronization (all lightheads should be set at the same pattern)

Flash Pattern Selection:

For Flash Pattern, momentarily apply +VDC to **YELLOW** wire:

- once for next pattern
- quick three times to Flash Pattern #1

NOTE: This unit may not be factory-set at Flash Pattern #1

FP#	Flash Patterns	
1	Double [2Hz]	
2	Single [2Hz]	
3	Triple [2Hz]	
4	Quad [2Hz]	
5	Random	
6	Single [SAE, CA13, NFPA]	
7	Mega	
8	Double [SAE, NFPA]	
9	Triple [SAE]	
10	Quad [SAE, NFPA]	
11	Quint [SAE]	
12	Ultra [SAE]	
13	Single-Quad	
14	Single H/L	
15	Single-Triple-Quint	
16	Steady*	

[All approvals based on actual model ordered] * Display Half Steady in Split Flash Mode.

Multi-unit Synchronization & Flash Mode:

Each unit may be set to 1 of the 4 different Flash Mode:

- i. Simultaneous (all) Flash
- ii. Top-Down Split Flash



*Illustration shows LED area only, not the actual number of diodes.

1. Enter SETTING MODE by apply +VDC to RED and YELLOW wires simultaneously.

- 2. Once in SETTING MODE, the unit will display its current:
 - All / Split Flash Mode
 - and Group in short (single or double) flashes :
 - Single flash = Group1
 - Double flash = Group2
- 3. Remove **YELLOW** wire from +VDC then momentarily apply
 - +VDC to change to the desired Flash Mode and Group:
 - Heads of the same Group will flash together.
 - Heads of the different Group will flash alternately.
- 4. Once in desired Flash Mode and Group, save and exit SETTING MODE by disconnecting all power.

#	FLASH MODES	GROUP
1	All (default)	Group1
2	All	Group2
3	Top-Down Split	Group1
4	Top-Down Split	Group2
5	Left-Right Split	Group1
6	Left-Right Split	Group2
7	Criss-Cross Split	Group1
8	Criss-Cross Split	Group2







RESPONDER SERIES WARNING LIGHTHEAD

INSTALLATION

